

D I G I T A L
Alcohol Detector

AlcoHAWK®
PT500P

Quick Results

PT Core™
Electro-chemical Fuel-cell
Sensor

**Easy-to-Read
Orange LCD Display**


**Adjustable
Blowing Time**

**Wireless Printing
Capabilities***

**Temperature
Display**


**Switch Between
%BAC, g/L, or ‰BAC**

**Warning Level
Indicator**

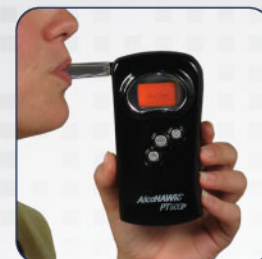

*Wireless printer sold separately
or with PT500P Professional Kit

- A professional digital breath alcohol screener with wireless printing capabilities.
- Features the new *PT Core™* electro-chemical fuel-cell sensor and an advanced pressure scan sensor for reliable and accurate results.
- Advanced features and design make it a favorite for law enforcement, clinics, corrections, schools, and other settings where professional alcohol testing is performed.

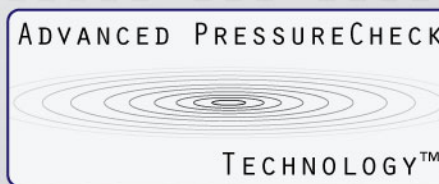

AlcoHAWK® PT500P

DIGITAL Alcohol Detector

AlcoHAWK®
PT500P

The AlcoHAWK® PT500P is a professional breath alcohol tester with wireless printing capabilities that is easy to use. Featuring the new *PT Core™* electro-chemical fuel-cell sensor, which is not subject to interference from acetone and offers greater linear accuracy and sensitivity than traditional semi-conductor testers. Its simple menu-driven operation allows you to quickly obtain an estimated screen for the presence of alcohol up to 0.400% BAC. Also features a large, easy-to-read orange back-lit LCD display. The AlcoHAWK® PT500P is the ideal unit for law enforcement roadside screening, corrections, probation officers, substance abuse clinics, boating, military, and many other areas of professional testing in which fuel-cell accuracy and reliability is required.

Features

-  **PT Core™ electro-chemical fuel-cell sensor**
-  **Simple and easy-to-use**
-  **Lightweight and compact**
-  **Adjustable blowing time**
-  **Wireless printing (printer not included)**
-  **Temperature monitor**
-  **Multiple output conversions**

Specifications

Dimensions	5 in x 2.63 in x 1.25 in	Response Time	3 seconds ¹
Weight	5.2 oz (with batteries)	Blowing Time	5 seconds ²
Housing	Shock resistant, molded plastic	Operating Temp	50-104° F (10-40° C)
Batteries	Two (2) AA Alkaline (included in professional kit)	Detection Range	0.000-0.400% BAC
Battery Life	200 Tests ¹	Sensor Accuracy	±0.005% at 0.05% BAC ³
Sensor	<i>PT Core™</i> Electro-chemical Fuel-cell Sensor	Warranty	One Year Limited Warranty
Warm Up Time	10-20 seconds ¹		

1 Estimates, results may vary.

2 Default setting, professional kit adjustable from 3-8 seconds.

3 Read owner's manual before use to understand proper use, accuracy limitations, and calibration requirements.

4 This device is not to be used to determine if the subject is legal or able to operate any equipment or vehicle.

© 2008 Q3 Innovations, LLC. All Rights Reserved.

AlcoHAWK®

Q3 Innovations, LLC www.q3i.com

2349 Jamestown Avenue, Suite #4, Independence, Iowa 50644

Tel: 319-334-3412 Fax: 319-334-3421 Email: sales@q3i.com